

HART Protocol Transmitter



KT-502H Series PRODUCT MANUAL

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Features

- HART protocol
- 330° rotatable display for environment conditions
- Increased visibility with backlight function
- Multi-input (order 1 input type among 22 types)
 - RTD 8 types
 - Thermocouple 8 types
 - mV 4 types
 - Resistor 2 types
- Explosion class: Ex d IIC T6
- Protection structure: IP67 (IEC standard)

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.**(e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- 03. Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in electric shock.
- 04. For installing the unit, ground it exclusively and use over AWG11 (4 mm²) ground cable.**
Failure to follow this instruction may result in electric shock.
- 05. Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire or electric shock.
- 06. Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.

⚠ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire or electric shock.
- 03. Keep the product away from metal chip, dust, and wire residue which flow into the unit.**
Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'.
Otherwise, it may cause unexpected accidents.
- 10.5 - 45 VDC≐ Model power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Keep away from high voltage lines or power lines to prevent inductive noise.
Do not use near the equipment which generates strong magnetic force or high frequency noise.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- The explosion-proof standard of this unit is Ex d IIC T6, protection structure of this unit is IP67 and the range of max. surface temperature is below 85 °C.
Use the verified explosion-proof electric connection (cable gland or sealing fitting)
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000 m
 - Pollution degree 2
 - Installation Category II
- **The explosion-proof unit is certified and the same specifications which is reported to Korea Gas Safety Corporation. (This unit is manufactured following by the announcement 2013-54 of Ministry of Employment and Labor of Korea.)**

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

KT - **502H** ① - ②

① Mounting bracket



0: Without bracket
1: With bracket

② Temperature input range

Refer to 'Input Specifications'.

Specifications

Model	KT-502H
Power supply	10.5 - 45 VDC≐ (with backlight LCD)
Output	DC 4-20 mA (2-wire)
Input specifications	Refer to 'Input Specifications'
Accuracy	± 0.3 %
Display method	PV display part: 7 segment 5 digit (character size: W4×H8 mm), Parameter display part: 14 segment 8 digit (character size: W2.6×H4.8 mm), 52 bar meter
Display range	-19,999 to 99,999
Setting method	HART-protocol (no setting key)
Response time	1 sec
Alarm	≤ 3.8 mA, > 20.5 mA / Sensor break 3.6 mA
Load	≤ (V power supply - 7.5 V) / 0.22 A
Galvanic insulation	2 kVAC~ (Input/Output)
Unit weight (Packaged)	≈ 1.2 kg (≈ 1.4 kg)


Ambient temp.	-20 to 70 °C, storage: 20 to 80 °C (no freezing or condensation)
Ambient humi.	0 to 85 %RH, storage: 0 to 85 %RH (no freezing or condensation)
Protection structure	IP67 (IEC standard)
Material	Body: Aluminum (ALDc.8S), Cover O-Ring: Buna N
Explosion class⁰¹⁾	Ex d IIC T6
Approval	CE ENEC  

01) The explosion class specification is acquired and managed by KONICS.

Input Specifications

Input type		Input range (°C)	Input range (°F)
Thermocouple	K (NiCr-Ni)	-270 to 1,372	-454 to 2,501.6
	J (Fe-CuNi)	-210 to 1,200	-346 to 2,192
	E (NiCr-CuNi)	-270 to 1,000	-454 to 1,832
	T (Cu-CuNi)	-270 to 400	-454 to 752
	B (PtRh30-PtRh6)	0 to 1,820	32 to 3,308
	R (PtRh13-Pt)	-50 to 1,768	-58 to 3,214.4
	S (PtRh10-Pt)	-50 to 1,768	-58 to 3,214.4
RTD	N (NiCrSi-NiSi)	-270 to 1,300	-454 to 2,372
	Cu50 Ω	-50 to 150	-58 to 302
	Cu100 Ω	-50 to 150	-58 to 302
	DPt100 Ω	-200 to 850	-328 to 1,562
	DPt500 Ω	-200 to 250	-328 to 482
	DPt1000 Ω	-200 to 250	-328 to 482
	Ni100 Ω	-60 to 180	-76 to 356
Resistance transmitter	Resistance (Ω)	0 to 400 Ω	-
		0 to 2000 Ω	-
		-10 - 75 mV	-
Analog	Voltage	-100 - 100 mV	-
		-100 - 500 mV	-
		-100 - 2,000 mV	-
		-100 - 2,000 mV	-


Opening the Cover

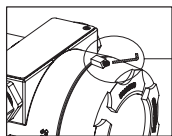


To open the cover, unscrew the M3×6L headless bolt using a 1.5 hexagon wrench and rotate the cover.

Dimensions


• Unit: mm, For the detailed drawings, follow the Autonics website.

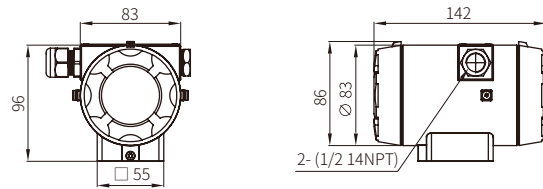

■ With bracket

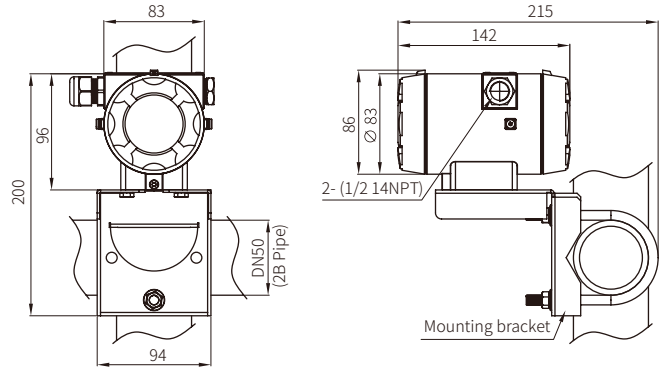

Connections

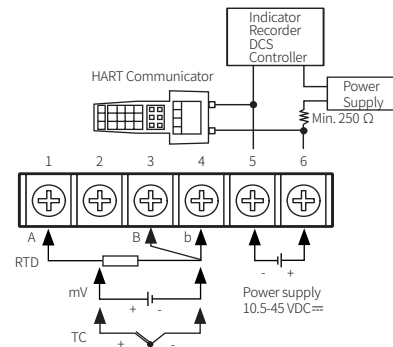

Temperature Range Setting

• Connect a HART communicator and set temperature range as follows.

Online (Generic)
1. Device Setup
2. PV
3. PV Ao
4. PV LRV
5. URV **SAVE**

- Press  key for 3 sec.
Select '4. PV LRV' by using   keys and press  key.

1. PV LRV
2. URV
HELP HOME

- Select '1. PV LRV' (Low temp. range) and press  key.

PV LRV
0.000 deg C
0.000
HELP DEL ESC ENTER

- Set Low temp. range and press **ENTER** (F4) key.

1. PV LRV
2. URV
HELP HOME

- Select '2. URV' (High temp. range) and press  key.

PV URV
100.000 deg C
100.000
HELP DEL ESC ENTER

- Set High temp. range and press **ENTER** (F4) key.

1. PV LRV 0.000 deg C
2. URV 100.000 deg C
HELP SEND HOME

- When the set temperature range is correct, press **SEND** (F2) key.

- WARNING -
Pressing 'OK' will
change device output
put 100P in manual

- Press **OK** (F4) key.

- WARNING -
Return control 100P
To automatic control
OK

- Press **OK** (F4) key.

1. PV LRV 0.000 deg C
2. URV 100.000 deg C
HELP HOME

- Check the set temperature range.
Press **HOME** (F3) key.
HART communication will be off.

Current Trim Setting

- Connect a HART communicator and set temperature range as follows.

1. Device Setup
2. PV
3. PV Ao
4. PV LRV
5. URV

① Select '1. Device Setup' by using \uparrow , \downarrow keys and press \rightarrow key.

1. Process Variables
2. Diag/Service
3. Basic Setup
4. Detailed Setup
5. Review

② Select '2. Diag/Service' by using \uparrow , \downarrow keys and press \rightarrow key.

1. Test device
2. Loop test
3. Calibration
4. D/A trim

③ Select '4. D/A trim' by using \uparrow , \downarrow keys and press \rightarrow key.

WARN-Loop should be removed from automatic control

ABORT OK

④ Press **OK** (F4) key.

Connect reference meter

ABORT OK

⑤ Press **OK** (F4) key.

Setting fid dev output to 4mA

ABORT OK

⑥ Press **OK** (F4) key.

Enter meter Value 4.000

HELP DEL ABORT ENTER

⑦ Press **ENTER** (F4) key to set 4 mA display value.

Fid dev output 4.000 mA equal to reference meter ?

1. Yes
2. No ABORT ENTER

⑧ If output display value is correct, select '1. Yes' and press **ENTER** (F4) key. If not, select '2. No' and press **ENTER** (F4) key and re-set the display value. E.g.) If output display value is 3.89mA, select 3.89 and press **ENTER** (F4) key.

Setting fid dev. output to 20mA

ABORT OK

⑨ Press **OK** (F4) key.

Enter meter Value 20.000

HELP DEL ABORT ENTER

⑩ Press **ENTER** (F4) key to set 20 mA display value.

Fid dev output 20.000 mA equal to reference meter ?

1. Yes
2. No ABORT ENTER

⑪ If output display value is correct, select '1. Yes' and press **ENTER** (F4) key. If not, select '2. No' and press **ENTER** (F4) key and re-set the display value.

NOTE-Loop may be returned to automatic control

ABORT OK

⑫ Press **OK** (F4) key.

Diag/Service

1. Test device
2. Loop test
3. Calibration
4. D/A trim

HELP SAVE HOME

⑬ Press **HOME** (F3) key.

Device Disconnected

RETRY QUIT

⑭ Press **QUIT** (F3) key.

1. Offline
2. Online
3. Frequency Device
4. Utility

⑮ Press \square (F3) key to quit the setting menu.

Segment Table

The segments displayed on the product indicate the following meanings. It may differ depending on the product.

7 Segment				11 Segment				12 Segment				16 Segment			
0	0			0	0			0	0			0	0		
1	1			1	1			1	1			1	1		
2	2			2	2			2	2			2	2		
3	3			3	3			3	3			3	3		
4	4			4	4			4	4			4	4		
5	5			5	5			5	5			5	5		
6	6			6	6			6	6			6	6		
7	7			7	7			7	7			7	7		
8	8			8	8			8	8			8	8		
9	9			9	9			9	9			9	9		
A	A			A	A			A	A			A	A		
b	B			b	B			b	B			b	B		
c	C			c	C			c	C			c	C		
d	D			d	D			d	D			d	D		
E	E			E	E			E	E			E	E		
F	F			F	F			F	F			F	F		
G	G			G	G			G	G			G	G		
H	H			H	H			H	H			H	H		

Error

Display	Error	Troubleshooting
Err 05	Temperature sensor A, B or all sensors are disconnected	Check the temperature sensor
Err 06	Temperature sensor B is disconnected	
Err 07	When PV is lower than the low-limit value of set temperature range	Check the low-limit value of the set temp. range
Err 08	When PV is higher than the high-limit value of set temperature range	Check the high-limit value of the set temp. range